Instructions - Cabinet Pull-Out Swivel Mount

33SL001

Thank You for your purchase of an Expert Mount. The SL001 is designed to securely attach a Flat Panel LCD to a cabinet or an armoire. It will allow the ability to pull the TV out and swivel.


Safety Warning: If you do not understand these directions, or have any doubts about the safety of the installation, please call a qualified contractor or contact Expert Mounts at 855.5MOUNTS or www.ExpertMounts.com.

Check carefully to make sure that there are no missing or defective parts. Our customer service representatives can quickly assist you with installation questions and missing parts.

Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified by Expert Mounts.


Expert Mounts will not be liable for damage or injury caused by incorrect mounting, incorrect assembly, or incorrect use. Please call Expert Mounts before returning products to the point of purchase.

1 Mounting the slide unit. Properly align the slide unit to the desired location on the surface the SL001 is to be mounted on. Using a drill and a ¼" drill bit, drill a hole in each location (6 total) in the Shelf. (Make sure each slide bracket is equal distance from the leading edge of the shelf) Note: The front edge of the mounting bracket is even with the mounting surface for the TV. (For Example: If your TV is 3" thick and you want the recess the TV 1", you would need to start the mounting bracket 4" from shelf edge. If you want the TV to be flush with the edge, set the mounting bracket back the same depth of the TV. If you want the TV to protrude 1" you would set the mounting bracket (3"-1" =2") 2" from the leading edge of the shelf.)

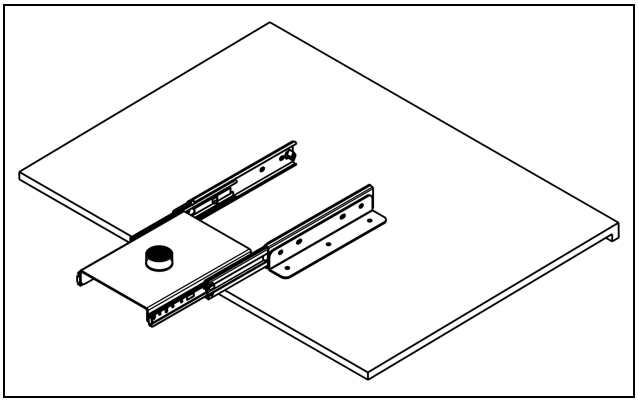


WARNING: It is the responsibility of the installer to verify the surface the SL001 is mounted to is secured so that it will NOT tip forward when the television is pulled out into its extended position. The mounting surface must be capable of supporting the total weight of the television and the mount.


2 Installing the support pole. Thread the support pole into the female coupler on the top of the slide unit. The pole may not thread all the way into the coupler. Make sure that the pole is threaded far enough in so that the set screw comes in contact with the threaded portion of the pole.

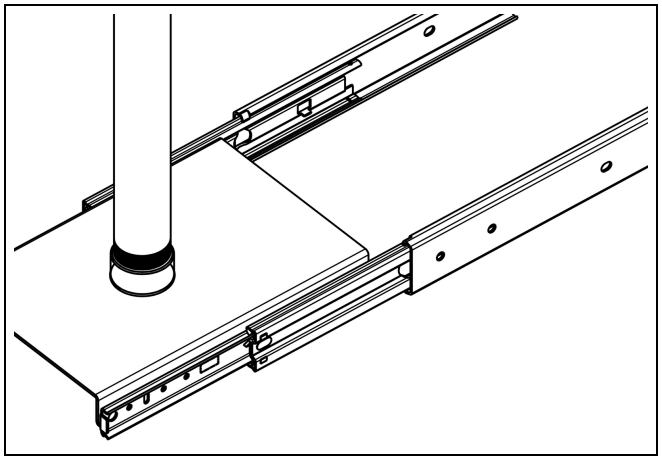


3 Install the supplied set screw to secure the support pole into place.

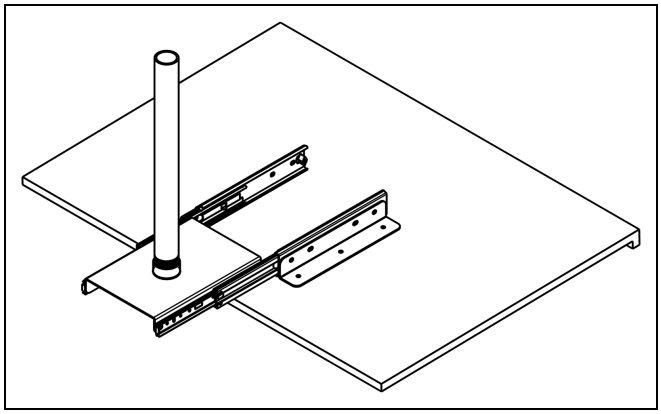


4 Attaching the Mounting bracket. Install the large set screw collar onto the support pole and adjust to the proper height. The height of the collar should be at a minimum height to allow the TV to properly swivel on the support pole. This height should be at a measurement of half the overall height of your TV minus 4 inches. Example if the overall height of your TV is 20”, you should set the collar at a minimum height of 6” on the support pole from the slide unit surface. This will give you the proper clearance to allow the TV to swivel.

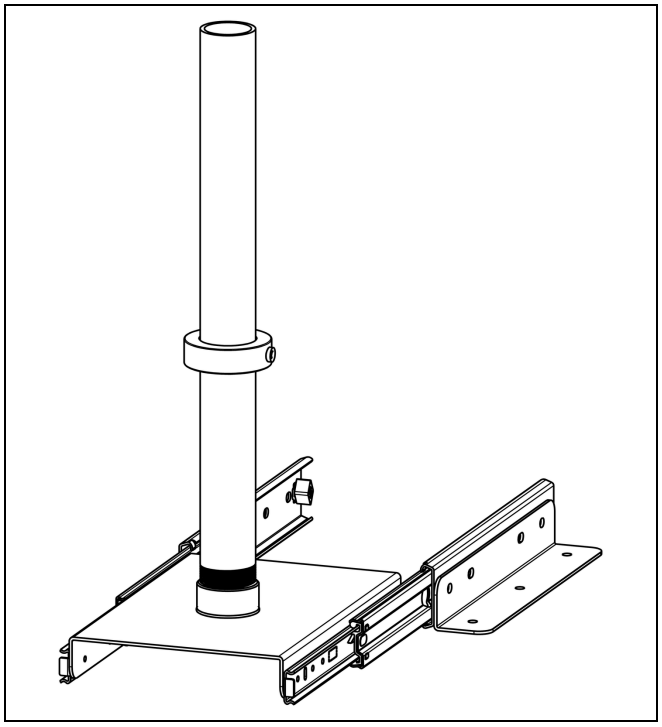


5 Next attach the “Wall Plate” to the NPT Pipe adaptor with the supplied bolts, plastic standoffs, plastic alignment washers and nylon locking nuts.

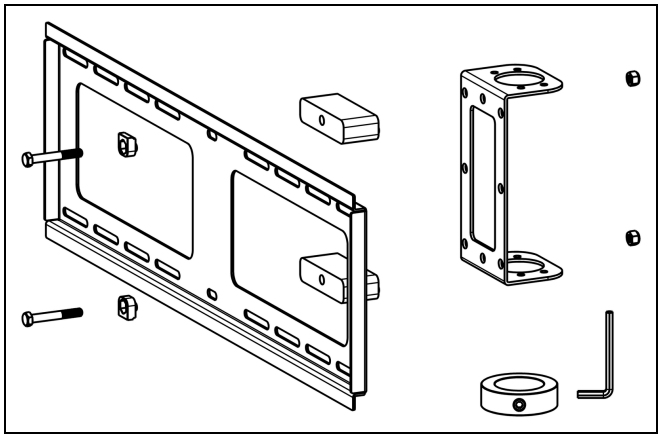


6 Slip the NPT Pipe adaptor on the support pole and allow it to rest on the set screw collar.

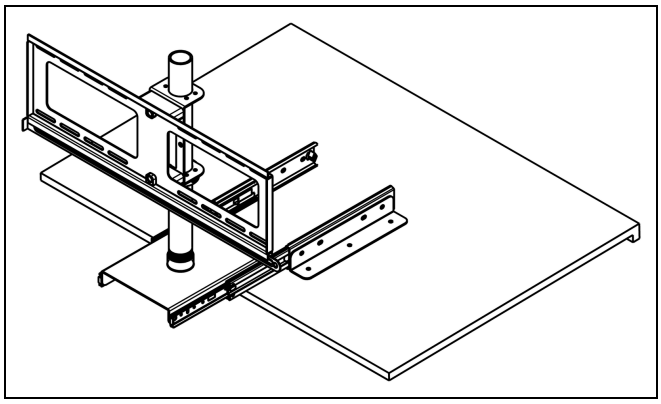


7 Attaching bracket to TV. Attach the upright rails to the TV/ Monitor both at equal heights with the tilt control lever to the outside of the TV. Use the M-A to M-G hardware pack to attach the rails to the TV. If your TV/ Monitor has recessed holes or an obstruction on the back that prevents the rail from sitting flush against the TV, install the nylon spacers between the TV/ Monitor and the mounting rail. The screws should not be over tightened, nor should the screw bottom out. The mounting rails should be centered on the back of the TV.

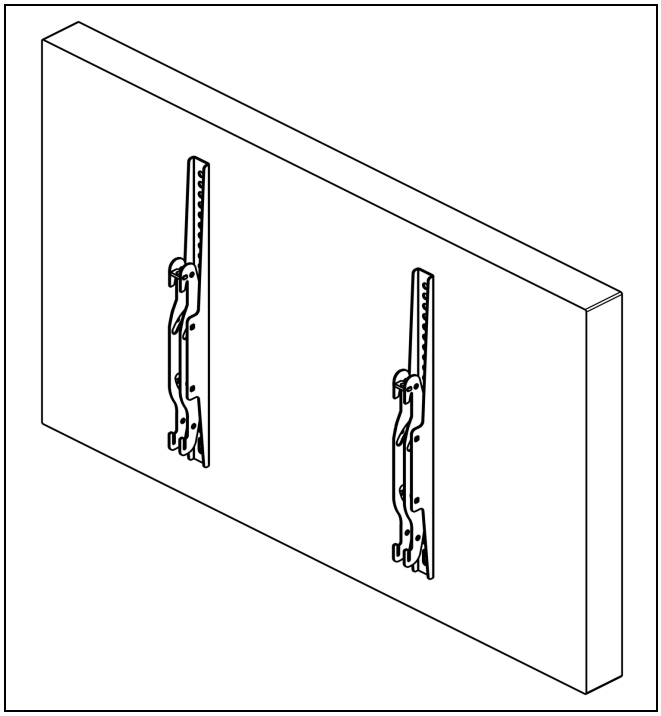


8 Installing the TV on the Slide Unit. First hook the TV Rails over the top of the Wall Plate and allow the hang. Next slide the lock bar in from the side. Make sure that the TV is centered on the wall plate for even weight distribution.

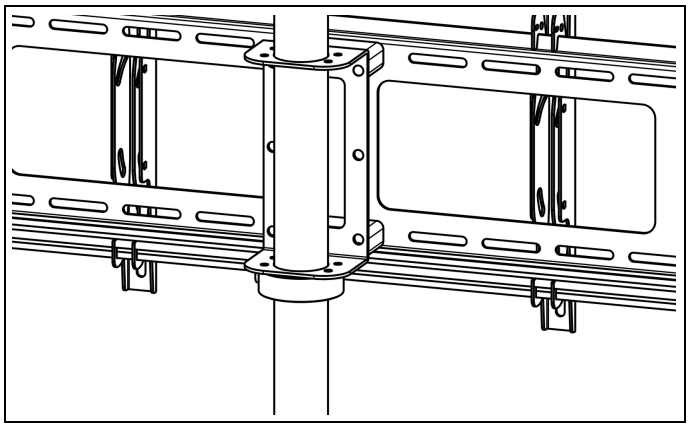

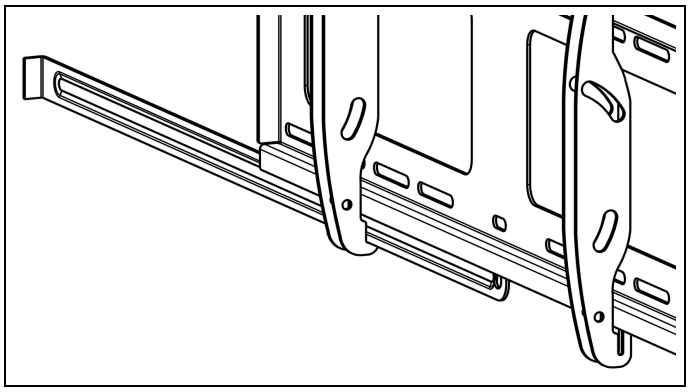


9 Level the TV. If the TV does not hang level, turn the leveling screw at the top of one TV rail with the supplied 5 mm hex wrench. Turning the screw raises or lowers that side of the TV. Adjust until the TV is level.

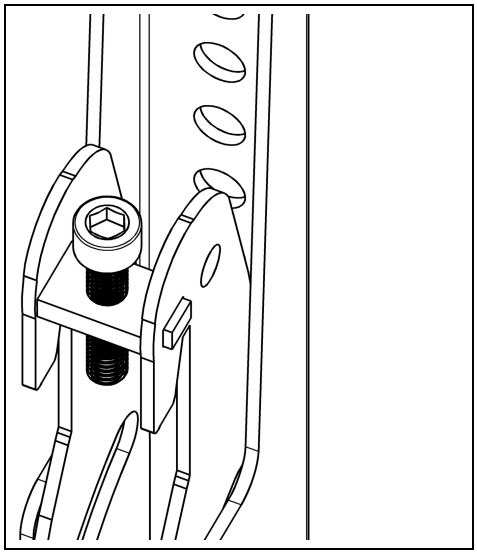

Warning: When extending the SL001 with the TV mounted make sure the weight does not cause the armoire or cabinet to tip forward. Attaching the unit to the wall may be required.

If you have any questions or concerns, please contact one of our customer service representatives.


M-A to M-G TV-Mount Hardware Pack — Parts List

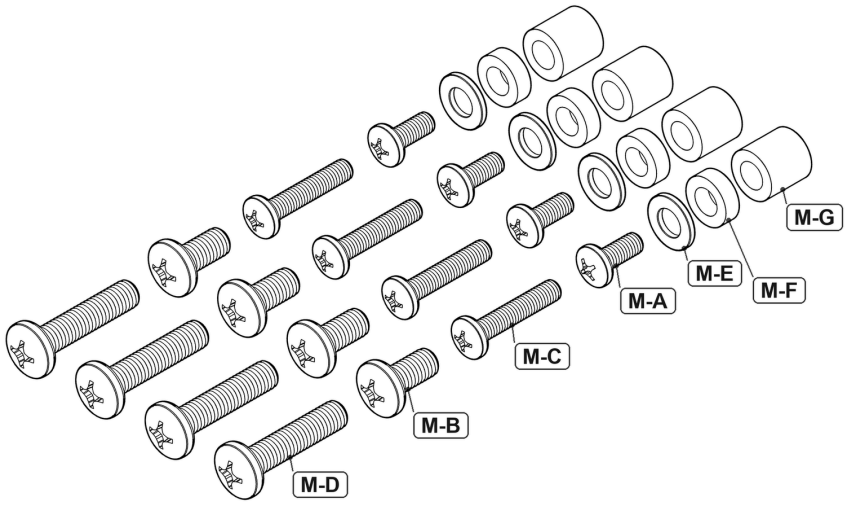

This hardware provided for attaching mount to TV

ITEM	PART NAME	LABEL	DESIGNATION	QTY
1	Machine screw M6 x 14, pan head	M-A		4
2	Machine screw M8 x 16, pan head	M-B		4
3	Machine screw M6 x 30, pan head	M-C		4
4	Machine screw M8 x 35, pan head	M-D		4
5	Washer M8	M-E		4
6	Plastic spacer M8 x 5 mm	M-F		4
7	Plastic spacer M8 x 15 mm	M-G		4

33SL001 Slide-Out Swivel TV Mount — Parts List

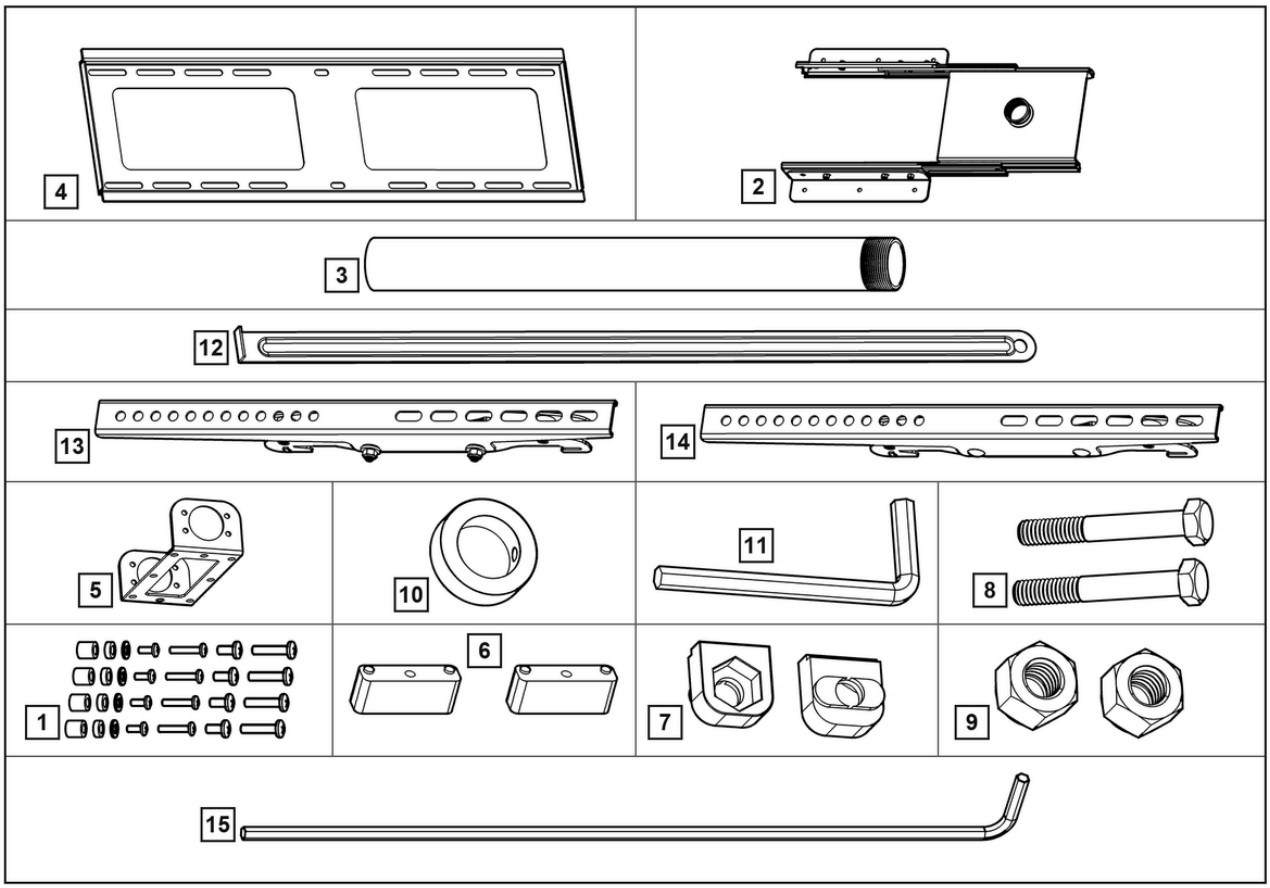

ITEM	PART NAME	DESIGNATION	QTY
1	Hardware pack (M-A to M-G)		1
2	Slideout base assembly	VMS-0001	1
3	Pipe, 20 inch	PP-0013	1
4	Wall plate		1
5	NPT adapter	PP-0001	1
6	Plastic standoff	FB-0008	2
7	Plastic alignment washer	FB-0007	2
8	Hex bolt 5/16-18 x 2-1/4	HW-0115	2
9	Nylon locking nut 5/16-18	HW-0002	2
10	Shaft collar, set-screw	PP-0012	1
11	Hex wrench, 1/4 inch (for the shaft collar)	HW-0118	1
12	Lock bar		1
13	TV tilt rail assembly, left		1
14	TV tilt rail assembly, right		1
15	Hex wrench, 5 mm (for the leveling screws)		1